Unpacking

Before using the device, check the device model and ensure that the shipped box includes the following items:

1x Sealing pressing plate	3x Rubber Plug (S,M,L)	2x M3x6 hex socket screw	4x M3x5 crosshead screw
3x Diode	1x Rope	1x Wiring cover	1x Allen wrench
1x R28A	1x Sealing ring	2x ST1.7x4 crosshead screw	

Wall mounting Accessories

2x M4x30 crosshead screw	1x Wall-mounting box	6x ST4x20 crosshead screw	6x Plastic wall anchor

Flush mounting Accessories

6x M4x10 crosshead screw	1x Flush-mounting bracket	1x Flush-mounting box	6x ST4x20 crosshead screw
6x Plastic wall anchor			

Product Overview

Camera
Photosensitive Sensor
Infrared Sensor
Infrared LED

Screen

RF card reader

Numerical Keypad

Page Up Key
Page Down Key

Clear Key
Dial Key
Microphone

R28A

Before You Start

Tools needed
(not included in shipped box)

- Cat Ethernet Cable
- Crosshead Screwdriver
- Electric Drill

Voltage and Current Specifications

- It is suggested that use PoE or 12VDC 1A power adapter to power on device.

AWG Sizes and Properties Table

Power Supply	12VDC 1A	
AWG	20	22
Resistance(ohm/km)	33.9	48.5
Cross-sectional Area(mm^2)	0.5189	0.3247
Wire Length(m)	≤50	≤40

Requirements

1.Place the device away from sunlight and light sources to prevent potential damage.
2.Do not place the device in the high-temperature, and humid environments or in surroundings impacted by magnetic field.
3.Install the device on the flat surface securely to avoid personal injuries and property loss caused by device' s falling.
4.Do not use or place the device near heating objects.
5.If installing the device indoors, please keep device at least 2 meters away from light, and at least 3 meters away from window and door.

Backlight   Direct sunlight   Direct sun through window   Indirect sunlight through window   Close to light

Warning!

1.To ensure safety, avoid touching power cord, power adapter, and device with wet hands, bending or pulling the power cord, damaging any components, and use only qualfied power adapter and power cord.
2.Be careful that standing up on the area under the device in case of personal injuries cause by hitting the device.

Caution

1.Do not knock device with hard objects.

2.Do not press down hard on the device screen.

3.Do not expose device to chemical products, such as alcohol, acid liquid, disinfectants, and so on.

4.To prevent the device installation from becoming loose, ensure accurate diameters and depths of screw holes.If the screw holes are too large, use glue to secure the screws.

5.Use wet cloth clean device surface softly, and then wipe the surface with dry cloth for cleaning the device.

6.If there is abnormal situation of the device, including uncommon sound and smell, please power off the device and contact Akuvox Technical Team immediately.

Wiring Interface
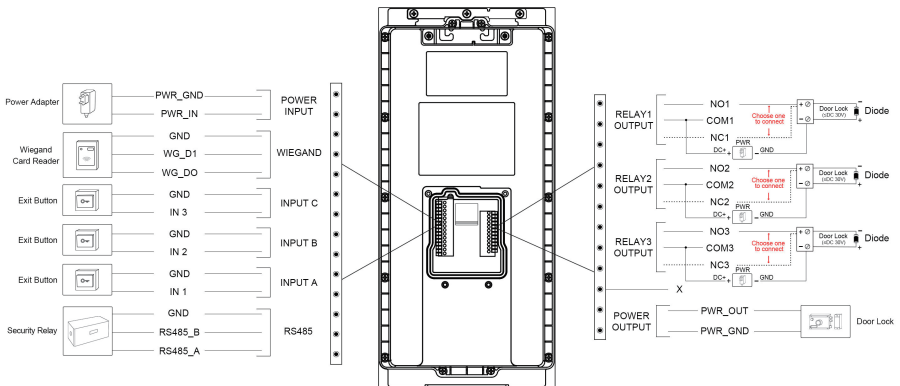
To protect the device from potential damage caused by over-voltage, it is recommended to wire a diode into the circuit. Connect the anode of the diode to the negative cable of the lock, and connect the cathode of the diode to the positive cable of the lock.

Akuvox Smart Intercom

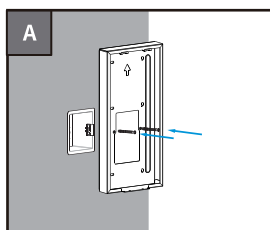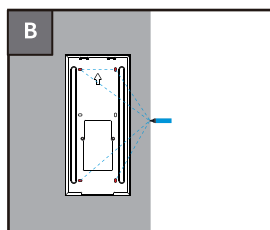# Installation
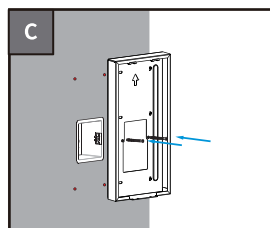
Step 1: Bracket/Box Installation

1.Wall Mounting

1.1.With 86 embedded box in the wall

Fix the **wall-mounting box** on 86 junction box with two **M4x30 crosshead screws.**

Mark the four holes of the **wall-mounting box** on the wall.

Take down two **M4x30 crosshead screws** and the **wall-mounting box.**
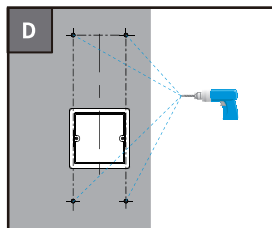
Akuvox Smart Intercom

D

Use a hand drill with 6 mm diameter bit to make holes in the marked positions.

E
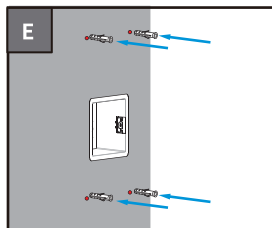
Insert the **plastic wall anchors** into the holes.

F
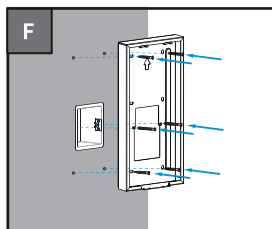
Fix the **wall-mounting box** with four **ST4x20 crosshead screws** and two **M4x30 crosshead screws.**

1.2.Without 86 embedded box in the wall

A

Mark the six holes of the **wall-mounting box** on the wall.

B
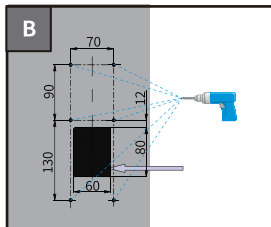
Use a hand drill with 6 mm diameter bit to make holes in marked positions.

Note: Please note the relative position in the left figure and the maximum error should less than 5mm.

C
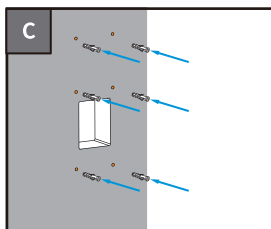
Insert the **plastic wall anchors** into the holes drilled before.

D
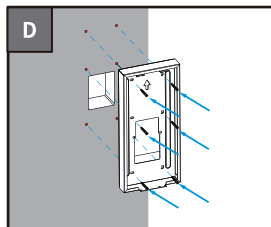
Fix the **wall-mounting box** with six **ST4x20 crosshead screws.**

2.Flush Mounting

A

Dig out a square hole(height*width*depth=262.5*121*60mm).

Note: The size of the hole should be a little larger than recommended value that can accommodate all cables

B

a.Insert the **flush-mounting box** into the hole and make sure the cables of the device can route through the cable hole.
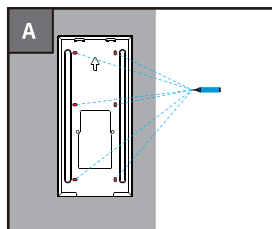b.Then mark the 6 holes of the **flush-mounting box** on the wall.

C
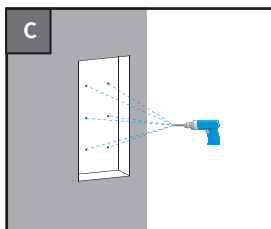
a.Take down the **flush-mounting box.**
b.Use a hand drill with 6mm diameter bit to make holes in the marked positions.
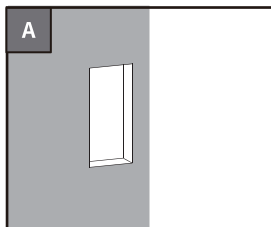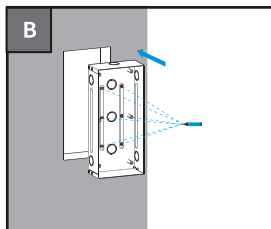
D
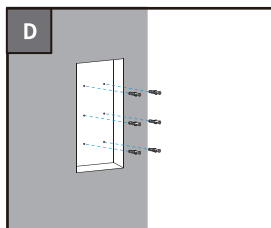
Insert the **plastic wall anchors** in the hole you drilled before.

E

a.Place the **flush-mounting box** into the square hole until the edges of which align to the wall.
b.Make all cables go through the cable hole.
c.Fix the **flush-mounting box** with six **ST4x20 crosshead screws.**

Note:The flush-mounting box can not over the edge of the square hole.

YS28000005

F

Use six **M4x10 crosshead screws** to fix the **flush-mounting bracket** on the **flush-mounting box.**

**Simple Installation (with lower resistance of vandalism)**

A
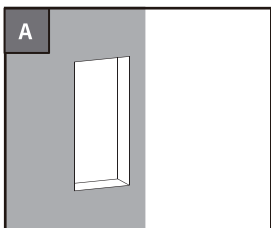
Dig out a square hole(height*width*depth=269.5*122.4*60.5mm).

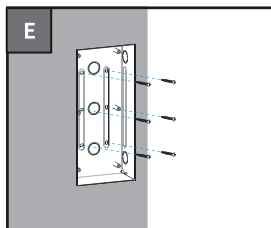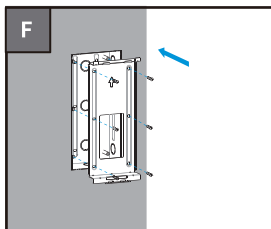Note:The size of the hole should be a little bigger than recommended value that can accommodate all cables.

B

a.Use cement or non-corrosive adhesive to fill the gap between the wall and the flush-mounting box.
b.Wait for the cement to dry before proceeding to the next step.

Note:To prevent water from entering the back cover of the door phone, it is recommended to fill the gaps around with waterproof material.
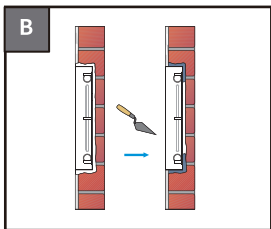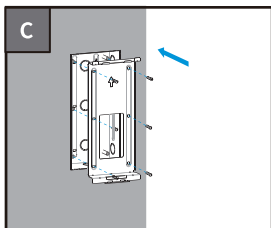

C

Use six **M4x10 crosshead screws** to fix the **flush-mounting bracket** on the **flush-mounting box.**
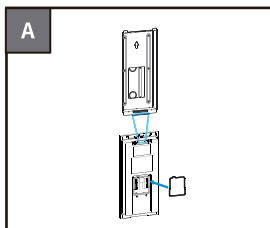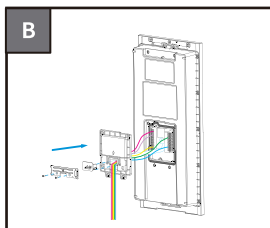
Step 2: Wiring cover Installation

A

a.For convenient wiring, hang R28A on the **wall-mounting box/ flush-mounting bracket** with **rope.**
b.Insert the **sealing ring** into the groove.

B

a.Make cables go through the **wiring cover,** connecting to the corresponding interfaces of the main board.
b.Choose a suitable size **rubber plug** to compress cables.
c.Fasten the **sealing pressing plate** with **ST1.7x4 crosshead screws.**

C
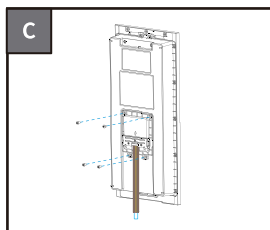
Use four **M3x5 crosshead screws** to fix the **wiring cover.**

Step 3: Device Mounting

A
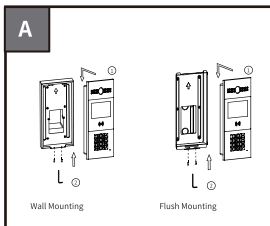
a.Place the device into the **wall-mounting box/flush-mounting bracket** until the edges of which align to the wall.
b.Pull the device downward and ensure the groove of it hooks to the lock catches of the back box.
c.Use the **Allen wrench** to tighten the device with two **M3x6 hex socket screws.**

Wall Mounting   Flush Mounting

Akuvox Smart Intercom

Application Network Topology

SIP Video Phone

PC
(third party)

Network Video Recorder
(third party)

LAN

PoE   PoE   PoE   PoE

4.3˝   4.3˝   4.3˝   4.3˝

R28A   R28A   R28A   R28A
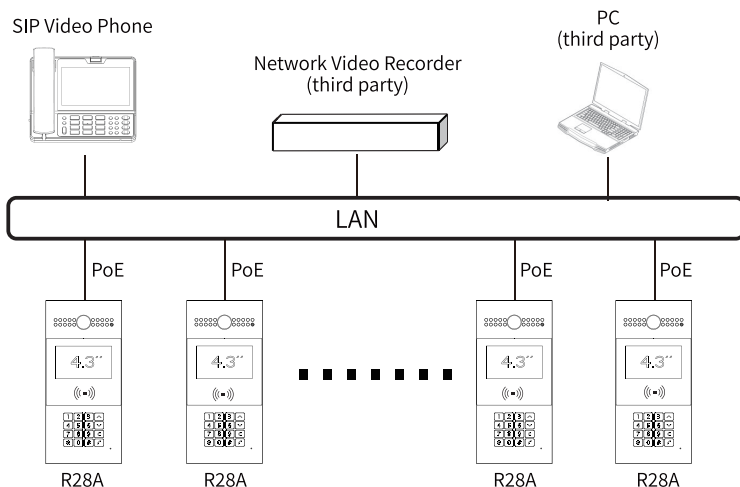
Device Test

Please verify the device status after installation:

1.**Network:** Press ***2396#** to enter administrator setting interface.Select **System information** to get the device's s IP address and network status. Network is working properly if the IP address is obtained.
2.**Intercom:** Enter the IP or SIP number and press **Dial** key to make a call.Or, press APT number to call. The call configuration is correct if the call is successful.
3.**Access Control:** Use pre-configured PIN code and RF card to unlock door.

Warranty

1.Akuvox warranty does not cover intentional mechanical damage or destruction caused by improper installation.
2.Do not attempt to modify, alternate, maintain, or repair device by yourself. Akuvox warranty does not apply to damages caused by anyone who is not representative of Akuvox or an Akuvox authorized service provider. Please contact Akuvox Technical Team if the device need to be repaired.

Get Help

For help or more assistance, contact us at:
https://ticket.akuvox.com/
support@akuvox.com
Scan the QR code to get more videos, guides, and additional product information.

Notice Information